


# Assembly Instructions for Filton Cask Cooling Equipment.


## 1. JOIN THE PIPES IN PARALLEL

Make sure one connector on each saddle is connected to the flow pipe from the cooler and the other is connected to the return pipe (see diagram1).

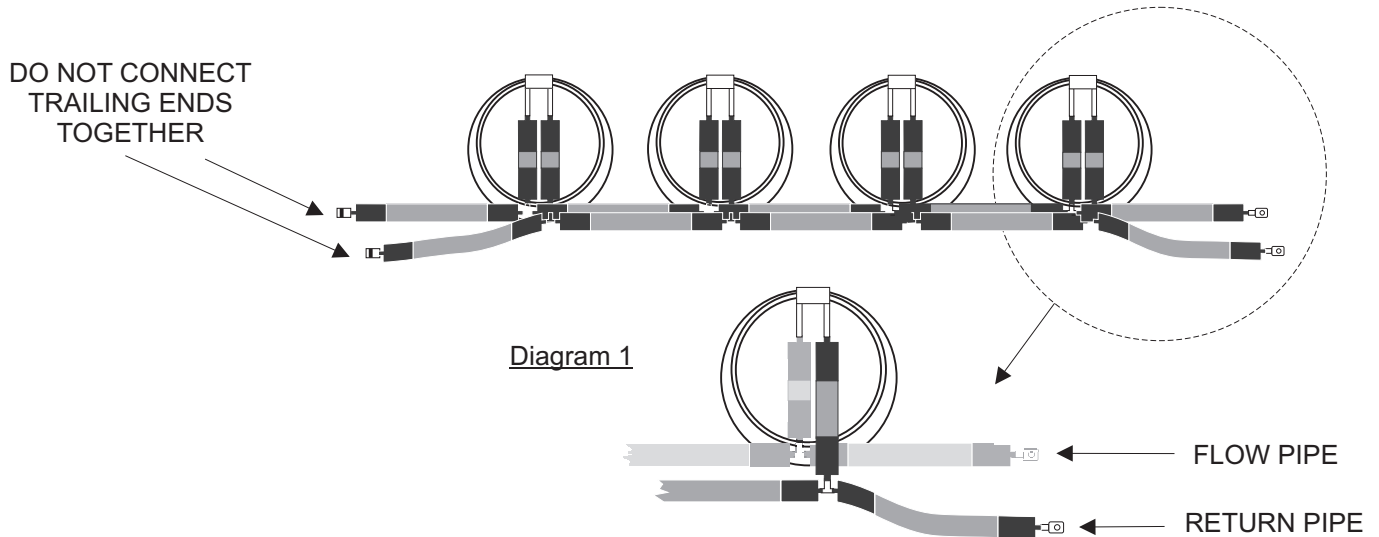

## 2. SET UPS EXCEEDING 4 CASKS.

Use the tees and extensions (supplied) to configure the pipe-work and saddles as required (see diagram 2).

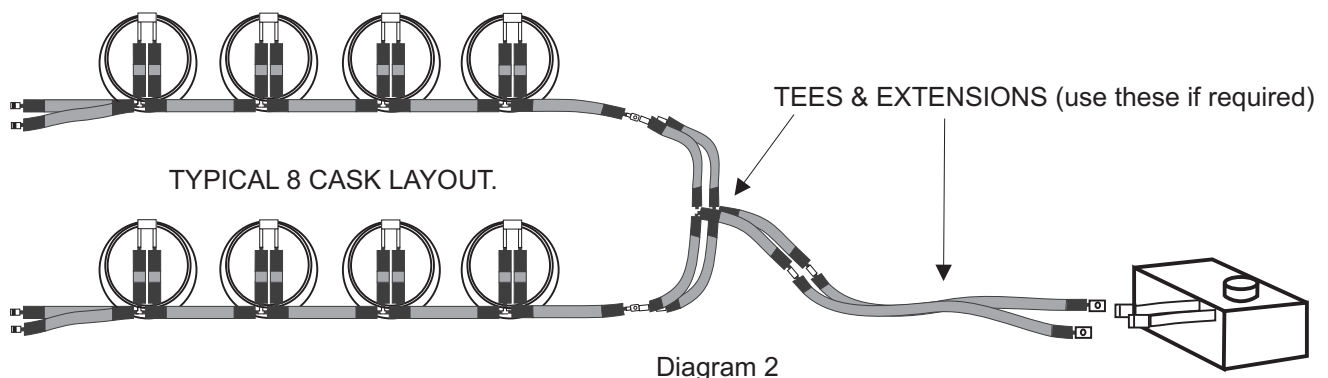

## 3. MAXIMUM CONNECTIONS.

Do not connect more than **EIGHT** saddles to a shelf cooler and no more than **SIXTEEN** saddles to a remote cooler.

## 4. INSTALL THE COOLER AND PIPE-WORK

**BEFORE SWITCHING ON THE COOLER** ensure it is filled with water (fill it until the coils inside are covered) and connect the cooler to the pipe-work. **DO NOT** switch on the cooler before the pipe-work is connected (to avoid pumping without any water flow).

## 5. CALL FILTON

If you have any problems call us on 01323 416948. *Most problems are easily rectified.*

## 6. HAVE A SUCCESSFUL AND STRESS FREE EVENT.

## 7. AFTER YOUR EVENT.

Please disconnect using the reverse of the assembly Instructions and pack the equipment ready for collection.

